

PARTS LIST FOR MH-0375-LM10

This Parts Listing has been compiled for your benefit. You can be assured your Mi-T-M Space Heater was constructed and designed with quality and performance in mind. Each component has been rigorously tested to insure the highest level of acceptance.

The contents of this Parts Listing are based on the latest product information available at the time of publication. Mi-T-M reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

WARNING

THIS IS A PROFESSIONAL SPACE HEATER. CAUTION SHOULD BE OBSERVED WHEN USING OR REPAIRING THIS UNIT! READ AND FOLLOW THE SAFETY WARNINGS LISTED BELOW BEFORE ATTEMPTING ANY REPAIRS ON THIS SPACE HEATER!

SAFETY WARNINGS

- 1. NEVER alter or modify the equipment. Use only genuine Mi-T-M parts for repair of your space heater. Failure to do so can cause hazardous operating conditions and will VOID warranty.
- 2. Be thoroughly familiar with controls.
- 3. Before servicing the unit, turn unit off, and allow the unit to cool down. Do not make repairs while the unit is running. Service in a clean, dry, flat area. Block the wheels to prevent the unit from moving. Be especially careful to properly dispose of any flammable materials.


Table of Contents

| SPECIFICATIONS | .3 |
|----------------|----|
| FRAME ASSEMBLY | 4 |

SPECIFICATIONS

| Model | MH-0375-LM10 | | |
|------------------------------|---------------------|--|--|
| Rating BTU/Hr | 225,000-375,000 | | |
| Fuel Consumption Lbs/Hr | 10.4 to 17.4 | | |
| Electrical Input | 120V, 60 Hz | | |
| Regulator Outlet Pressure | 7-18 PSIG | | |
| Motor | 1/5 HP 1,660 RPM | | |
| Size (L x W x H) | 34" x 12.6" x 18.5" | | |
| Net Weight (Lbs) | 41 | | |

FRAME ASSEMBLY

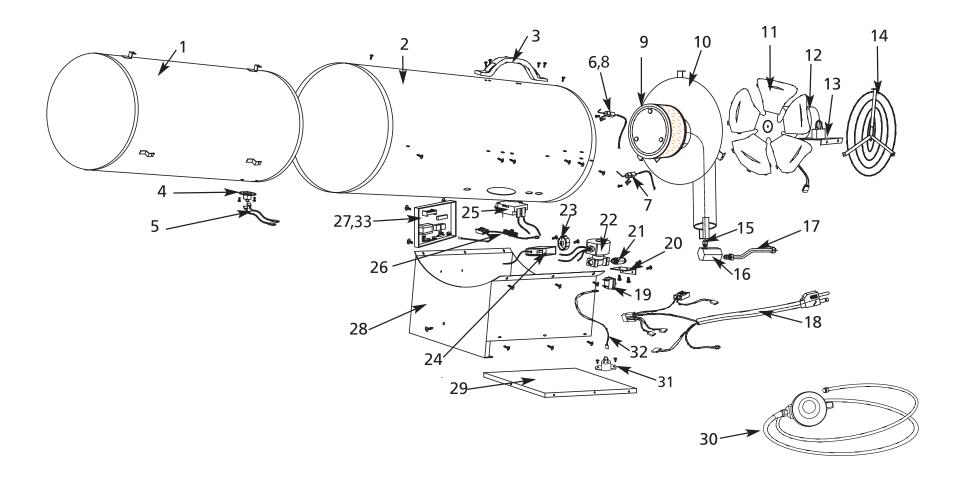

| | | MH-0375-LM | 10 103112 | | |
|----------------|-------------------------|------------|-----------|--|--|
| FRAME ASSEMBLY | | | | | |
| ITEM | ITEM DESCRIPTION | PART NO. | QTY. | | |
| 1 | INNER SHELL ASSEMBLY | 68-6112 | 1 | | |
| 2 | OUTER SHELL | 68-6113 | 1 | | |
| 3 | HANDLE ASSEMBLY | 68-6114 | 1 | | |
| 4 | THERMAL SWITCH | 68-6115 | 1 | | |
| 5 | THERMAL SWITCH CABLE | 68-6116 | 1 | | |
| 6 | SPARK PLUG | 68-6117 | 1 | | |
| 7 | SENSOR PLUG | 68-6118 | 1 | | |
| 8 | SPARK PLUG BRACKET | 68-6119 | 1 | | |
| 9 | BURNER ASSEMBLY | 68-6120 | 1 | | |
| 10 | REAR PLATE ASSEMBLY | 68-6193 | 1 | | |
| 11 | FAN ASSEMBLY | 68-6122 | 1 | | |
| 12 | MOTOR ASSEMBLY | 68-6123 | 1 | | |
| 13 | MOTOR BRACKET | 68-6194 | 1 | | |
| 14 | GUARD | 68-6125 | 1 | | |
| 15 | NOZZLE | 68-6126 | 1 | | |
| 16 | NOZZLE HOLDER | 68-6195 | 1 | | |
| 17 | TUBING ASSEMBLY | 68-6057 | 1 | | |
| 18 | POWER CORD ASSEMBLY | 68-6128 | 1 | | |
| 19 | ON-OFF SWITCH | 68-6111 | 1 | | |
| 20 | SOLENOID VALVE BRACKET | 68-6196 | 1 | | |
| 21 | INLET CONNECTOR | 68-6130 | 1 | | |
| 22 | SOLENOID VALVE | 68-6131 | 1 | | |
| 23 | THERMOSTAT KNOB | 68-6110 | 1 | | |
| 24 | THERMOSTAT | 68-6153 | 1 | | |
| 25 | SPARK MODULE | 68-6134 | 1 | | |
| 26 | SENSOR CABLE | 68-6053 | 1 | | |
| 27 | PCB | 68-6104 | 1 | | |
| 28 | BASE | 68-6085 | 1 | | |
| 29 | BASE COVER | 68-6089 | 1 | | |
| 30 | REGULATOR/HOSE ASSEMBLY | 68-6137 | 1 | | |
| 31 | TIP OVER SWITCH | 68-6138 | 1 | | |
| 32 | LEAD WIRE | 68-6197 | 2 | | |
| 33 | PCB CASE | 68-6105 | 1 | | |
| | | | | | |
| | | | | | |

Manufactured by Mi-T-M 8650 Enterprise Drive, Peosta IA 52068 563-556-7484/ Fax 563-556-1235